

Steps for updating your TT24, TT Control application, and UFXII card to the latest versions

1. This document describes the basic order of installations to upgrade your TT24, TT Control application, and UFXII card to the latest firmware/software versions. Download the following files from the TT24 product page:

<http://www.mackie.com/products/tt24/software.html>

- A. TT24 v1.3 Firmware (v1.3 Build 68)
 - B. TT Control PC Application (v1.3 Build 68.1)
 - C. UFXII Firmware (Build 73)
2. Uninstall the TT Control application. Please refer to the “TT Firmware Upgrade Instructions” for information on how to uninstall TT Control.
 3. Run the TT Control installer to install the new TT Control application (Version 1.3 Build 68.1) on your PC. Please refer to the “TT Control Installation Instructions” for details on installing TT Control.
 4. If necessary, update your TT24 with the latest firmware file (TT24Build_68.tt24bin). If you don't know the version you are currently using, you can check your firmware version and build number by pressing the “HELP” button on the console. Click Menu>About in the TT Control PC application to see the TT Control version and build number. Please refer to “TT Firmware Installation Instructions” for more details.

You have now successfully updated your TT24 and TT Control application. If you have a UFXII card installed in your TT24, read on for further instructions.

5. If you have a UFXII card installed in one of the two expansion slots, you must now update the UFXII card with the new UFXII Firmware (UFX-II_Build73.ufxbin). Please refer to the “TT24 Expansion Card Firmware Upgrade Instructions” for more information.