 


Spike XD-2 ASIO WDM Driver Installer for Windows XP

Note: The XD-2 driver and software files available for download from the Mackie website are compressed. You will need to unzip the downloaded file.

If you have already installed an older version of the driver, you will need to uninstall the old driver before proceeding. To do so:

- Go to **Add or Remove Programs** in your Windows XP Control Panel.
- Search for **The XD2 ASIO WDM Driver** in the list of installed programs and click **Remove**. Follow the on-screen instructions to remove the driver.

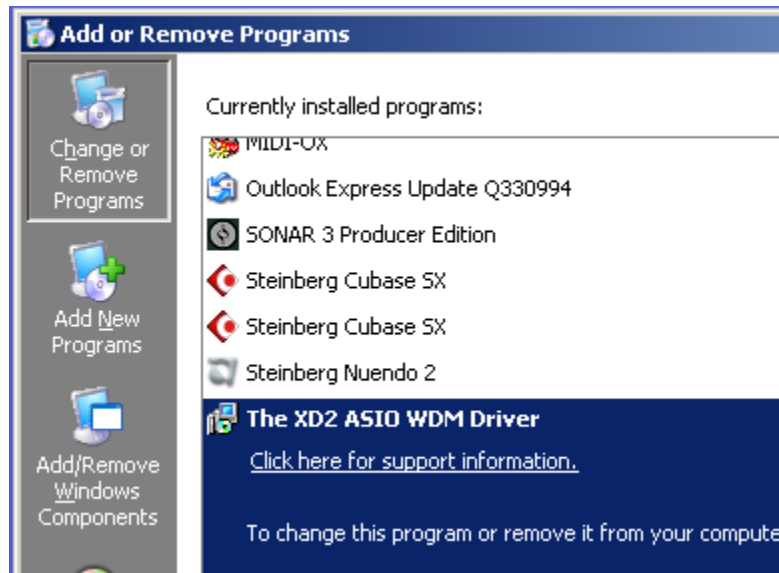

 
TO INSTALL THE XD-2 ASIO WDM DRIVER FOR WINDOWS XP

Step 1: Click the appropriate link to download the .zip file for the XD-2 ASIO WDM Driver Installer. If a dialog box opens asking if you would like to open or save the file, select **Save**. Then save the zip file to your computer's desktop.


Step 2: When the download has completed, double-click the zip file and extract its contents to the desktop of your computer.

Step 3: Locate the extracted file on your desktop and double-click it to launch the **XD-2 ASIO WDM Driver Installer**.

Step 4: When the installer application launches, click **Next**.

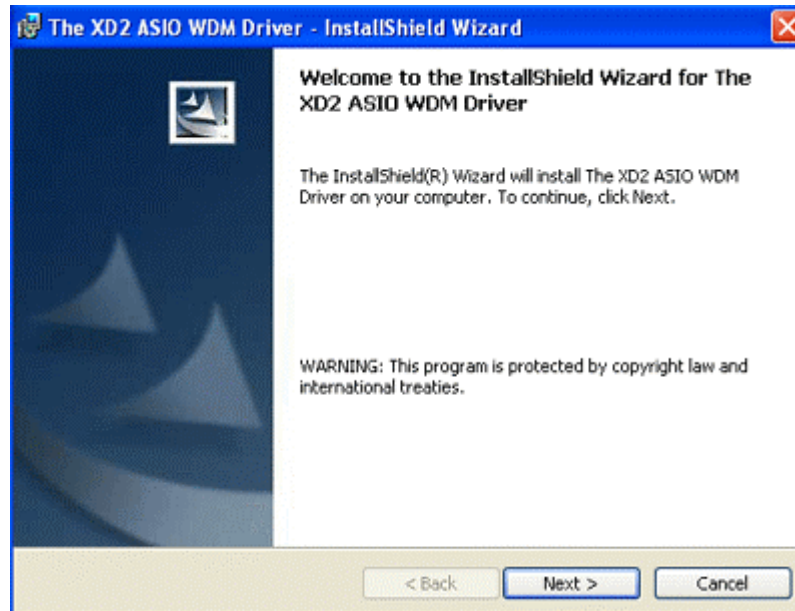

 Step 5: Click **OK** at the **RegSvr32** prompt.

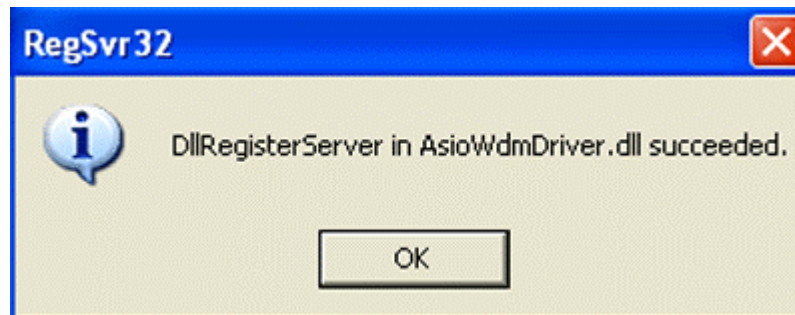

Step 6: Click **Finish** to complete the XD-2 ASIO WDM Driver installation.

