

Spike XD-2 Firmware Update - Windows XP


Note: The XD-2 driver and software files available for download from the Mackie website are compressed. You will need to unzip the downloaded file.

Step 1: Click the appropriate link to download the .zip file for the XD-2 Firmware. If a dialog box opens asking if you would like to open or save the file, select **Save**. Then save the zip file to your computer's desktop.

Step 2: When the download has completed, double-click the zip file and extract its contents to the desktop of your computer.

Step 3: IMPORTANT! Please restart your computer. Do not open any other applications (unless instructed) until you have completed the firmware upgrade procedure - certain applications are known to interfere with this process. You might want to print these instructions so you can easily follow along after restarting.


Step 4: After rebooting, and with the XD-2 powered on and connected to the computer, **launch the XD-2 SoftAPP** by double clicking the icon on your desktop. **Then right-click on the XD-2 icon** in the system tray and choose **About**.

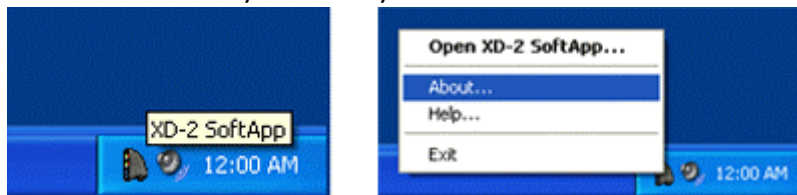


Step 5: Select the **Version Information** tab and click the **Upgrade Firmware** button.




Step 6: Click the **Browse** button.

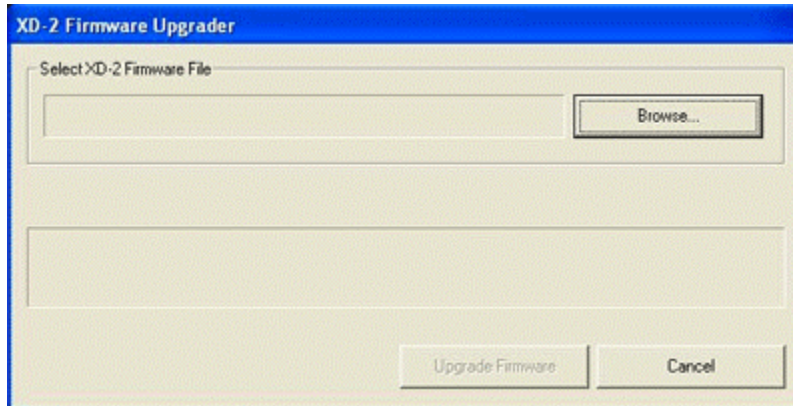


Step 7: Browse to your computer's desktop and select the appropriate firmware file, then click **Open**.

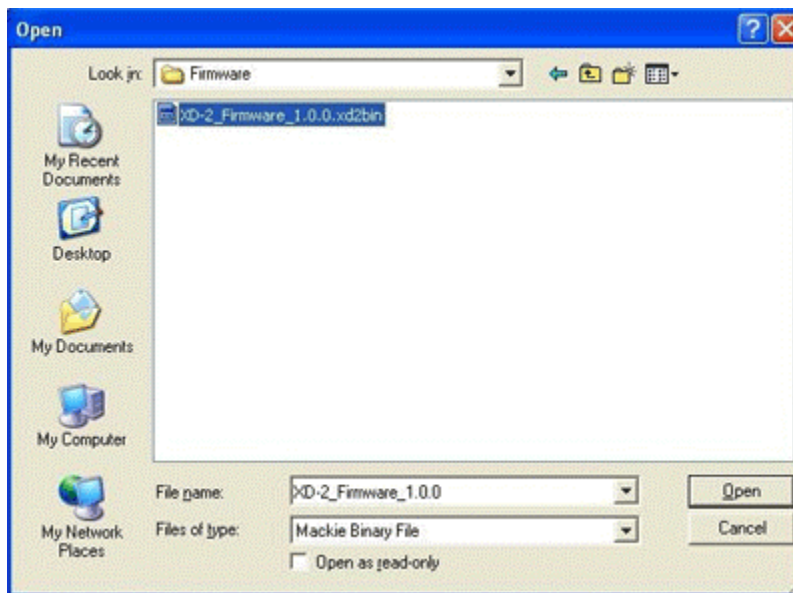


Step 8: Click the **Upgrade Firmware** button.

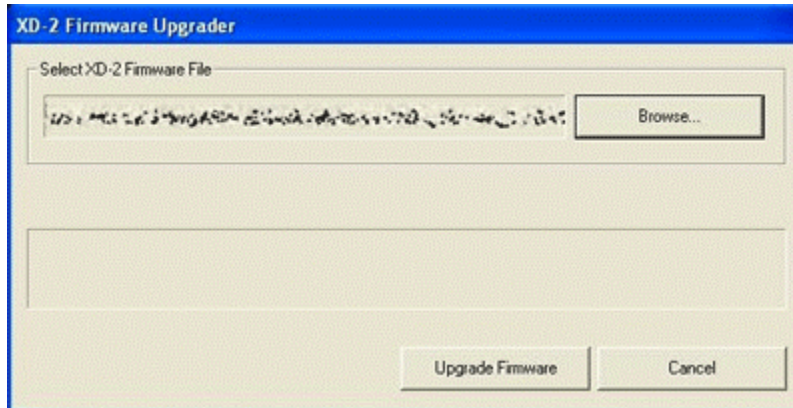


Step 9: Click **Yes**.

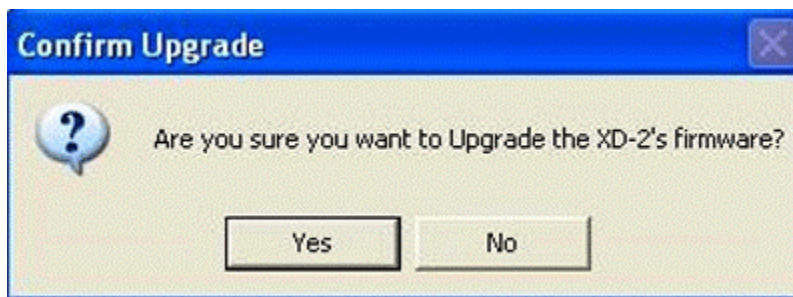

Step 10: Click **OK**.

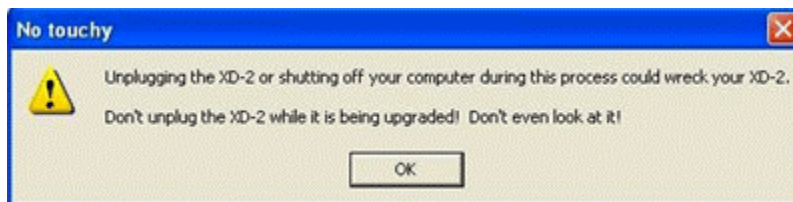

Step 11: Wait patiently while the XD-2 firmware is updated. This will take a minute or two.

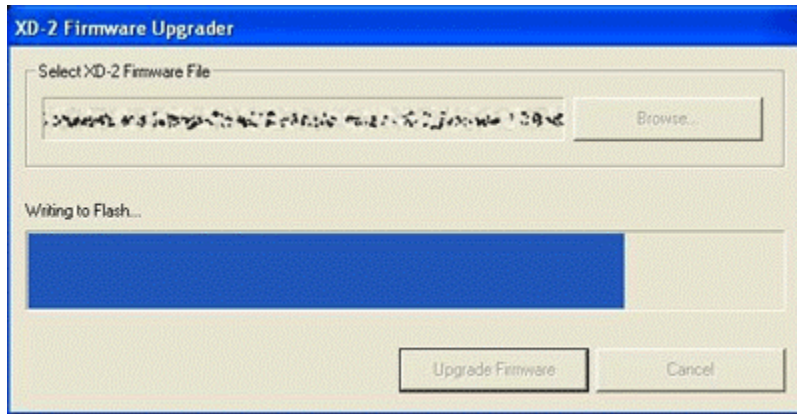

Step 12: Click **Done** after the XD-2's lights have stopped flashing to complete the firmware update.

